


FLEX COAT[®]

Professional Rod Building Supplies

Hand Rod Wrapper

Notice the soft velcro rod tension strap.

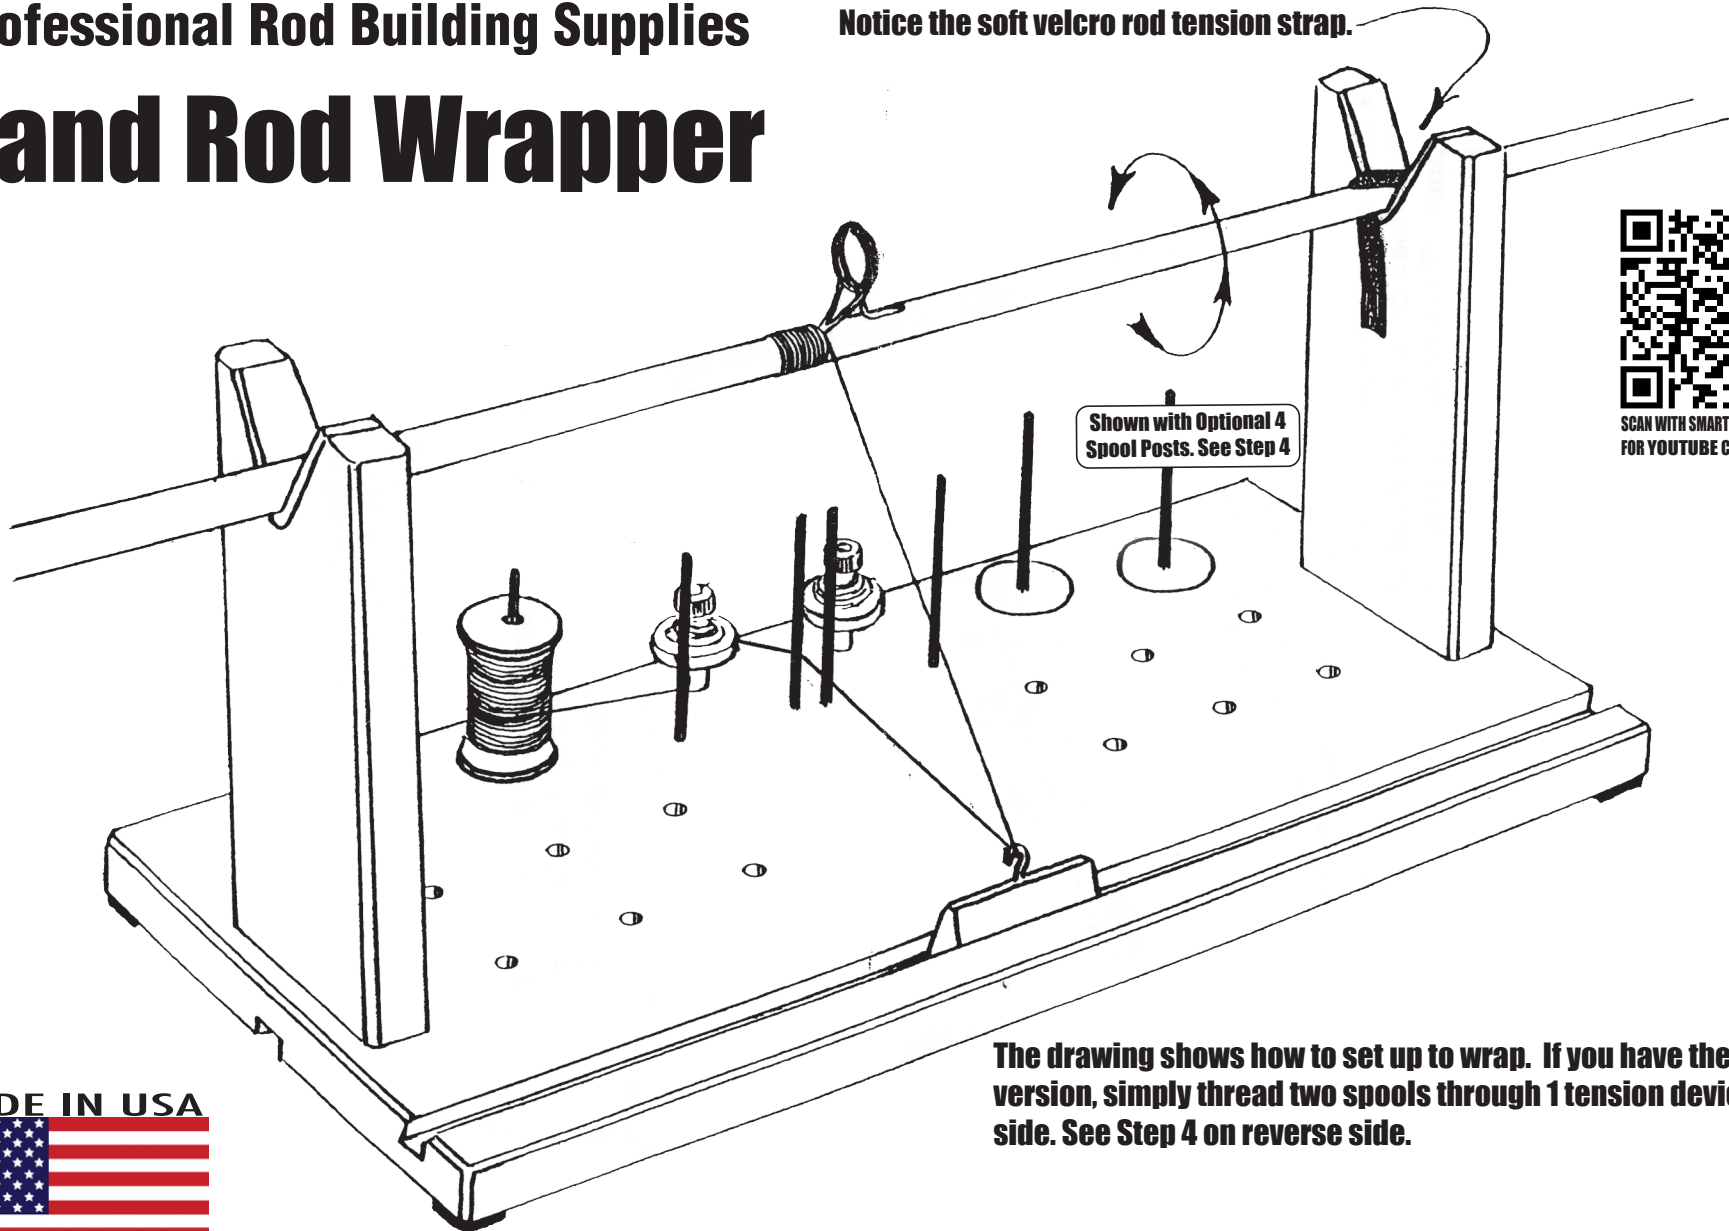

Shown with Optional 4 Spool Posts. See Step 4



SCAN WITH SMARTPHONE CAMERA FOR YOUTUBE CHANNEL 

MADE IN USA



The drawing shows how to set up to wrap. If you have the 4 spool version, simply thread two spools through 1 tension device per side. See Step 4 on reverse side.

FLEX COAT®

Professional Rod Building Supplies Hand Rod Wrapper Assembly


Step 1 Using a hammer, gently tap the 6 steel dowels (1/4" x 1 1/4") into the pre-drilled holes at the base of the V-uprights.

Step 2 Install the 3 soft velcro strips (3/4" x 3 1/2") into the V of the V-uprights.

Step 3 With a hammer, tap the thread tension devices into the medium pre-drilled holes of the wrapper base. Note the assembly of the thread tension devices. There are 2 square Teflon washers included in this kit. They sandwich together inside 1 tension device to help with coarse metallic threads.

Shown with Optional 4 Spool Posts. See Step 4

Step 4 With a hammer, tap the 6 to 8 stainless steel pins into the small pre-drilled holes of the wrapper. There are 2 versions of the hand wrapper, 2 thread spools and 4 thread spools. The 4 spool version will have 8 pins total and you will thread 2 threads per side through 1 tension device.

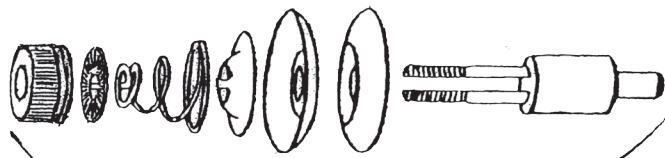

SCAN WITH SMARTPHONE CAMERA FOR YOUTUBE CHANNEL ▶



Step 5 Install 8 rubber pads on bottom corners of control board and upright base.